

FRICITION SLIDE

KENNEDY®

FRICITION SPRING RELEASE

1. Extend drawer fully
2. Insert tip of screwdriver behind black spring
3. Lift spring outward with screwdriver to release slide
4. Repeat for both sides of drawer
5. Remove drawer



FRICITION SLIDE REMOVAL/INSTALL

REMOVING SLIDES FROM CABINET INTERIOR WALL

1. Fully extend male slide
2. Insert screwdriver between interior wall and slide
3. Slightly pry with screwdriver against interior wall to offset lock tab
4. Lift slide up and out of holes



5. Repeat both sides
6. Replace slides
 - Insert horizontal clip into back hole on interior wall of cabinet
 - Slide vertical clip into front hole