

# BALL-BEARING SLIDE




## BALL-BEARING RETENTION CLIP RELEASE

1. Extend drawer fully

*At the same time:*

2. Left side - Take finger and push down on clear lever
3. Right side - Take finger and push up on clear lever
4. Pull drawer gently toward you with even pressure
5. Remove drawer

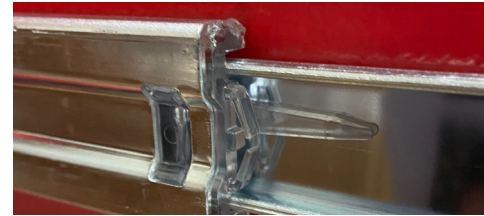

## BALL-BEARING SLIDE REMOVAL

1. Fully extend slide
2. Insert screwdriver between interior wall and slide
3. Slightly pry with screwdriver against interior wall to offset the lock tab
4. Lift slide up and out of holes
5. Repeat both sides



## BALL-BEARING SLIDE INSTALL

1. Start with the bottom drawer of cabinet and work your way up
2. Insert horizontal clip into back hole on interior wall of cabinet
3. Rotate slide down in front, sliding vertical clip into front hole on interior wall of cabinet
4. Repeat for both sides



## DRAWER INSTALL

1. Pull the ball bearing raceway (See image) in the cabinet portion of the slide forward on both sides
2. Re-align the drawer and cabinet slide portions and gently push drawer completely closed



Raceway

527489 Rev 2 06/2024