


Thank you for purchasing this Kennedy product. We produce value-built products for value conscious users. We welcome any comments or suggestions you may have. Just call or write the address below. We hope you will continue to find Kennedy the most complete source for your tool storage needs.



BENCHMARK CANOPY ASSEMBLY INSTRUCTIONS

STYLE NOS. 60101, 60102, 60103

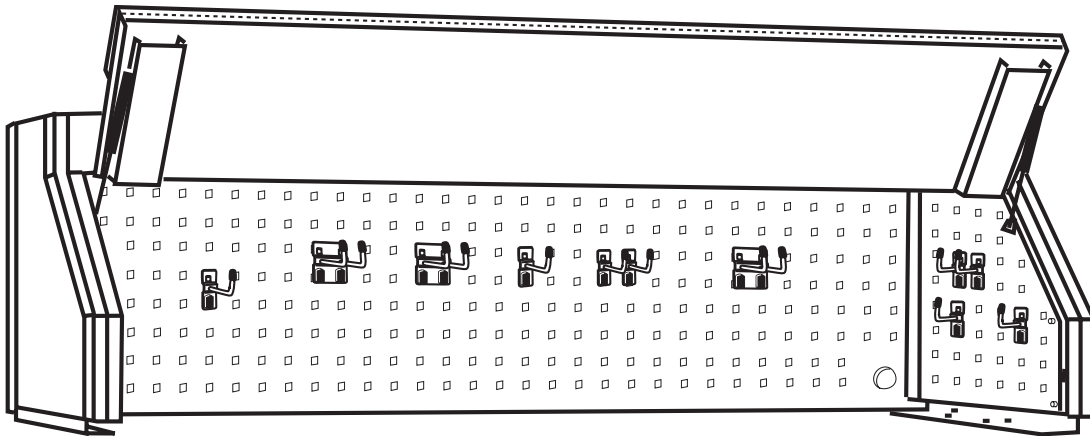

BEFORE ASSEMBLY OF YOUR CANOPY

Check carefully to ensure that all parts listed on the reverse side are included. If any are missing, please call 800-413-8665 and ask for the Sales Dept. Do not discard packing material until assembly is complete.

Benchmark[®] Canopy Assembly Instructions

TOOLS REQUIRED

Drill

1/8" Drill Bit

Pop Rivet Gun

Canopy to Base:

- 1. Remove metal support strap from canopy interior side walls. Remove screws from the (2) plastic stops, pull stops out, remove strap and re-assemble plastic stops to interior side wall to support canopy hood when closed.*
- 2. Place canopy on top of base cabinet, align to back and sides.*
- 3. Drill 1/8" diameter holes into cabinet top pan, through existing holes located in lower flange of riser on each side.*
- 4. Attach canopy to cabinet top with pop rivets on each side.*
- 5. Insert thumbscrews into threaded fasteners, screw down tight.*
- 6. Knockouts located in the back panel are provided for power cord management. Insert rubber grommets to protect power cord.*
- 7. Hook Kit provided to organize tool storage.*