


Thank you for purchasing this Kennedy product. We produce quality built products for value conscious users. We welcome any comments or suggestions you may have, just call or write the address below. We hope you will continue to find Kennedy the most complete source for your tool storage needs.

Kennedy[®]

Since 1911

Assembly Instructions


Louvered Panels

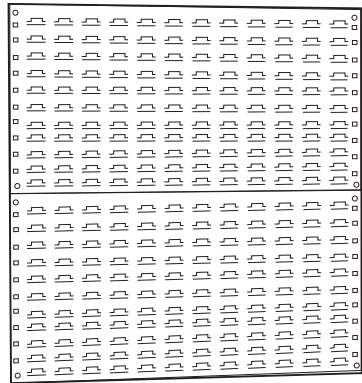


Two Panel Kits Contain:

- 50061—2 Tan Panels
- 50062—2 Blue Panels
- 50063—2 Gray Panels
- 50064—2 Green Panels


Louvered panels can be attached to steel, wood or concrete walls. Louvered panels can also be attached to the 50010 Tool Trolley Base, in the 50301 Mini-Workstation Cabinet and to the back of a work bench using no. 50050 Panel Braces.

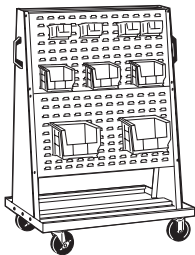


50061 Panel Set on a 50100 Tool Trolley Base

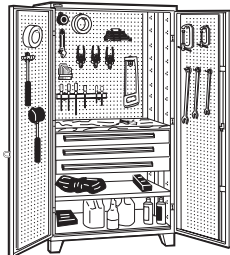

Model 50301 Mini-Workstation

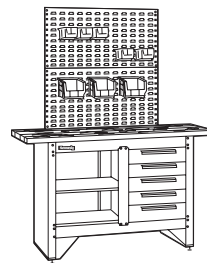


50061 Panel Set installed on a WW5405 Work Bench

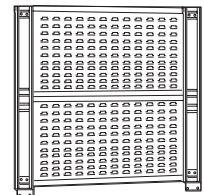

Back view of Panel Set with two 50050 Braces

Note: Use appropriate fasteners for attachment to the desired surface. Fastener hardware is not included. Panels must be attached securely to support heavy loads.

Recommended attachment is through the four 1/4" dia. holes in the four corners of the back flange. Place a washer over the hole, insert fastener and attach to wall or braces.

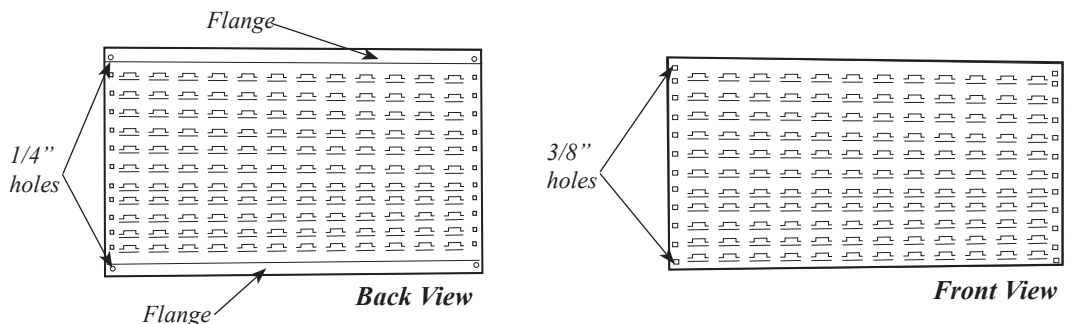

The holes in the back flange align with the 3/8" square holes on the ends of the front panel.