


**Kennedy**  
Since 1911

Kennedy Manufacturing Company  
Phone 800-413-8665 • Fax 419-238-5644  
www.kennedymfg.com  
email: kmcinfo@kennedymfg.com

### Installation of Security Lock Covers

1. Place security lock cover centered over lock.
2. Scribe the two piercings located each side of lock.
3. Drill scribed piercing with a 1/4" drill bit.
4. Place security lock cover over lock and assemble the supplied bolts, lock washers and nuts.

Part No. 527038

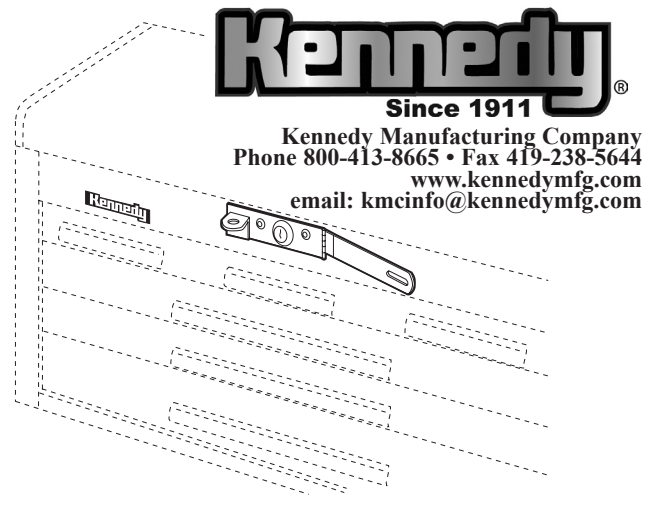


**Kennedy**  
Since 1911

Kennedy Manufacturing Company  
Phone 800-413-8665 • Fax 419-238-5644  
www.kennedymfg.com  
email: kmcinfo@kennedymfg.com

### Installation of Security Lock Covers

1. Place security lock cover centered over lock.
2. Scribe the two piercings located each side of lock.
3. Drill scribed piercing with a 1/4" drill bit.
4. Place security lock cover over lock and assemble the supplied bolts, lock washers and nuts.

Part No. 527038

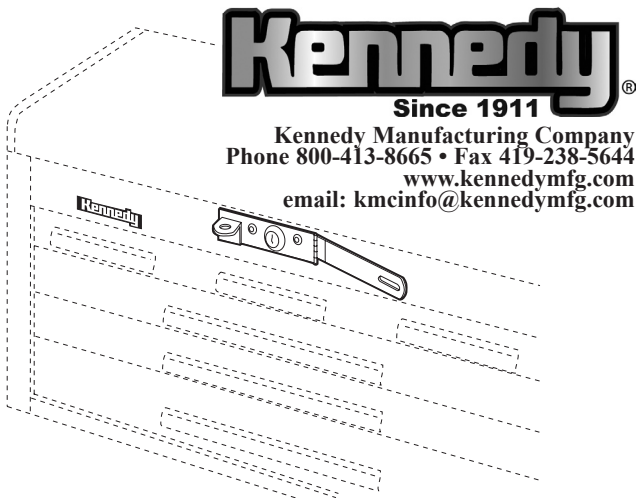


**Kennedy**  
Since 1911

Kennedy Manufacturing Company  
Phone 800-413-8665 • Fax 419-238-5644  
www.kennedymfg.com  
email: kmcinfo@kennedymfg.com

### Installation of Security Lock Covers

1. Place security lock cover centered over lock.
2. Scribe the two piercings located each side of lock.
3. Drill scribed piercing with a 1/4" drill bit.
4. Place security lock cover over lock and assemble the supplied bolts, lock washers and nuts.

Part No. 527038

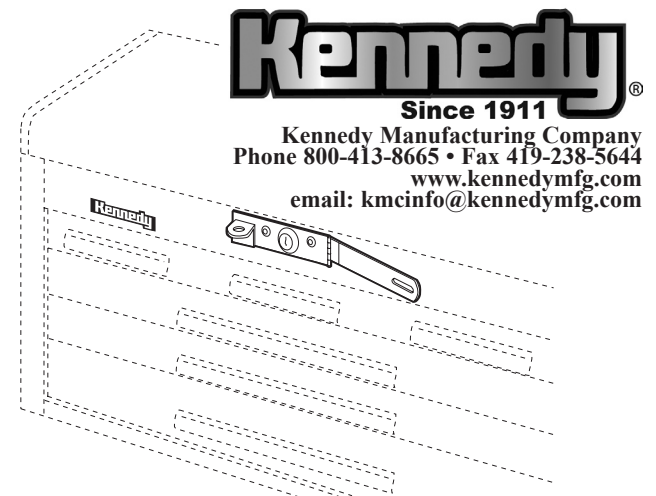

**Kennedy**  
Since 1911

Kennedy Manufacturing Company  
Phone 800-413-8665 • Fax 419-238-5644  
www.kennedymfg.com  
email: kmcinfo@kennedymfg.com

### Installation of Security Lock Covers

1. Place security lock cover centered over lock.
2. Scribe the two piercings located each side of lock.
3. Drill scribed piercing with a 1/4" drill bit.
4. Place security lock cover over lock and assemble the supplied bolts, lock washers and nuts.

Part No. 527038